



Insignia NS-B4111 External Antenna Replacement

Prerequisite Only

Written By: Kristin Yoshioka





TOOLS:

- [64 Bit Driver Kit](#) (1)
-

Step 1 — External Antenna



- Set the boombox upright. Remove the 4mm screw and the two 6mm washers with the Phillips PH1 screwdriver.
- Remove the external antenna.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-10-14 12:46:26 AM.